


# LIMIT ASSMY.

## LIMIT ADJUSTMENTS

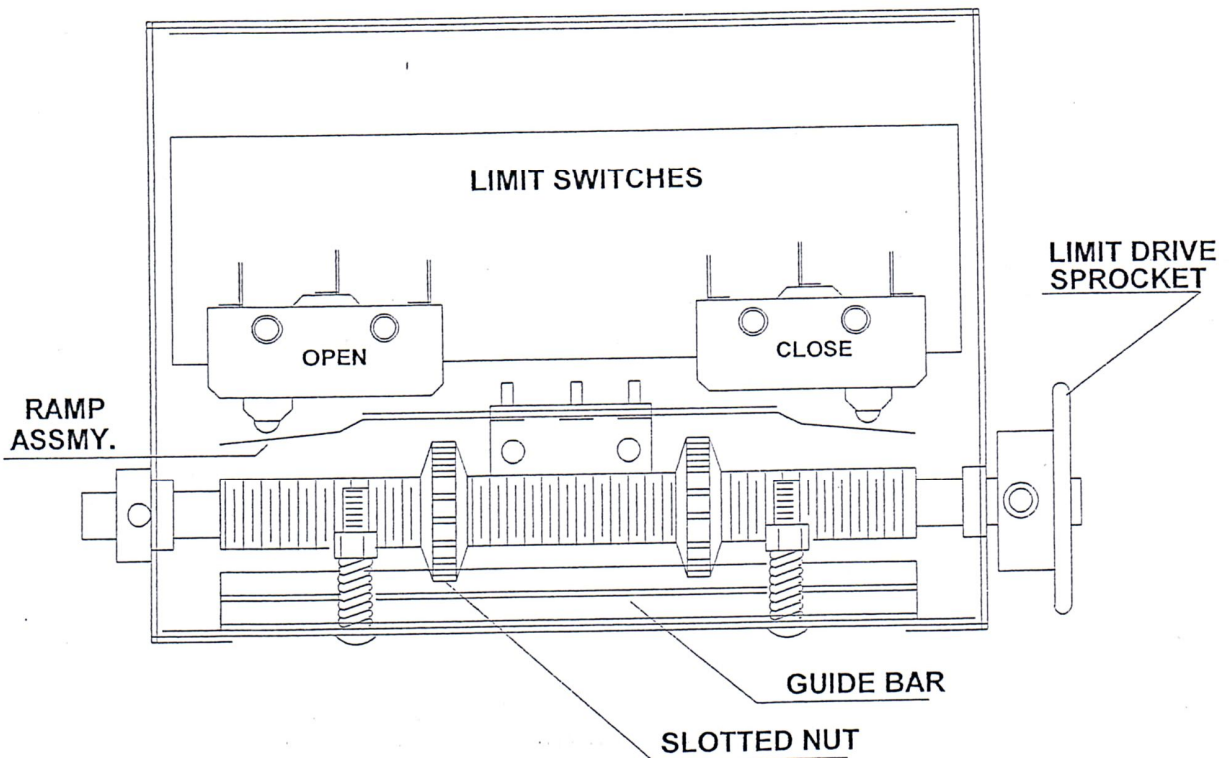

- 1 PULL SASH CHAIN AND LOCK IN PLACE.
- 2 OPEN DOOR WITH HAND CHAIN TO 6" BELOW FULLY OPEN, NOTING WHICH WAY SLOTTED NUTS MOVE. THE NUTS WILL USUALLY MOVE TO THE LEFT.
- 3 PUSH DOWN ON GUIDE BAR AND MOVE OPEN SLOTTED NUT TOWARD OPEN LIMIT SWITCH UNTIL NUT ACTUATES SWITCH THROUGH PRESSING RAMP ASSEMBLY.
- 4 REPEAT PROCEDURE FOR CLOSE LIMIT, USING THE OTHER SLOTTED NUT AND SWITCH.
- 5 UNLOCK SASH CHAIN. OPERATE DOOR THROUGH THE PUSH-BUTTON STATION, NOTING WHERE DOOR STOPS IN BOTH THE OPEN AND CLOSE POSITIONS.
- 6 MAKE FINAL ADJUSTMENTS IN NUT LOCATION BY REPEATING STEPS (1) THROUGH (5). ENSURE THAT DOOR DOES NOT SLAM INTO FLOOR OR GUIDE STOPS.
- 7 REPLACE LIMIT SWITCH COVER.

<b>WARREN DOOR SALES</b>		NATL. 1 800 227 7412 OHIO 1 800 227 7411
		RDK
LIMIT ASSEMBLY		DWG. NO.
OPEN /CLOSE ADJUSTMENTS		E